 





IN- VERTER      SHORE 220V 380V      GENERATOR. 1 2



Located above the 380V distribution leave always on

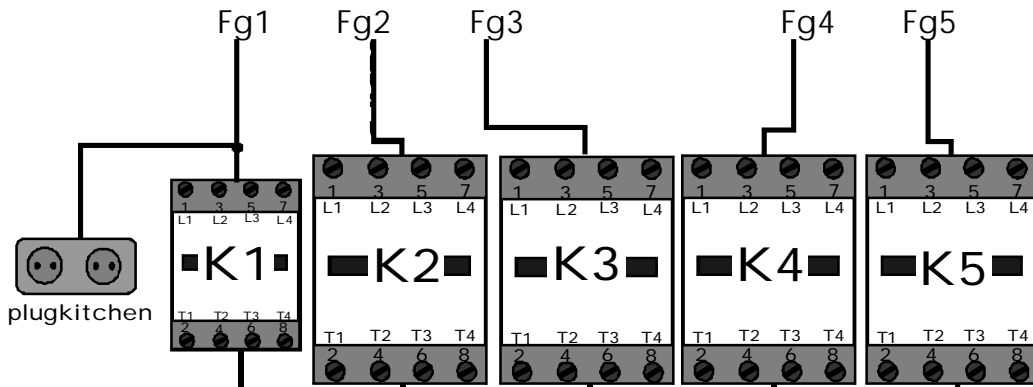

Relays located above in the 380V distribution only one is ON

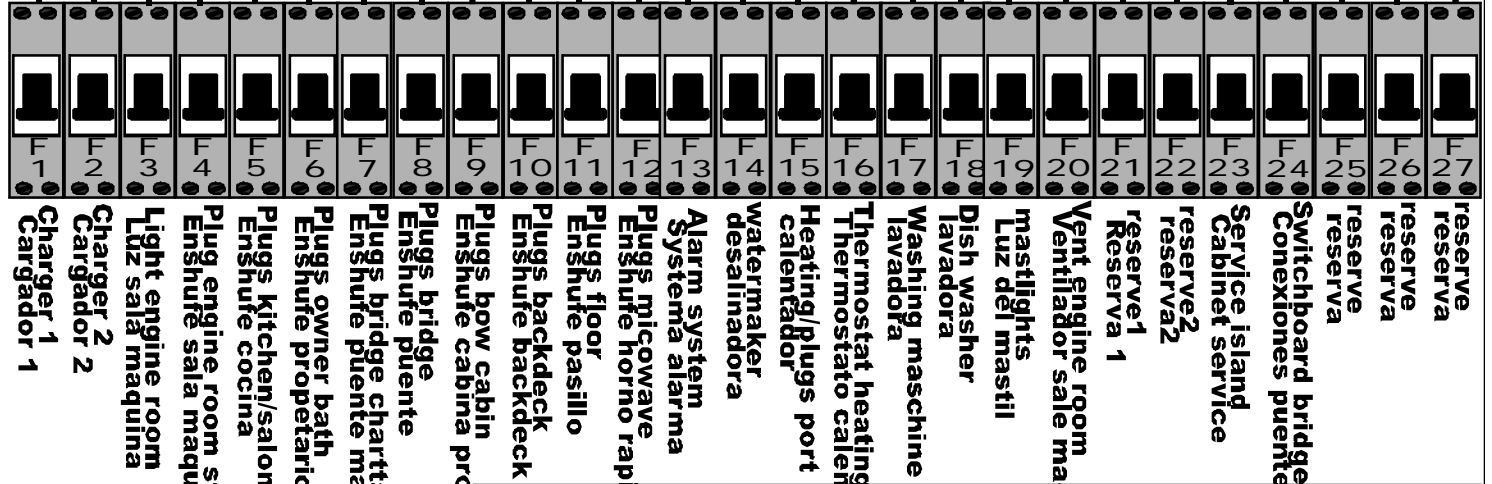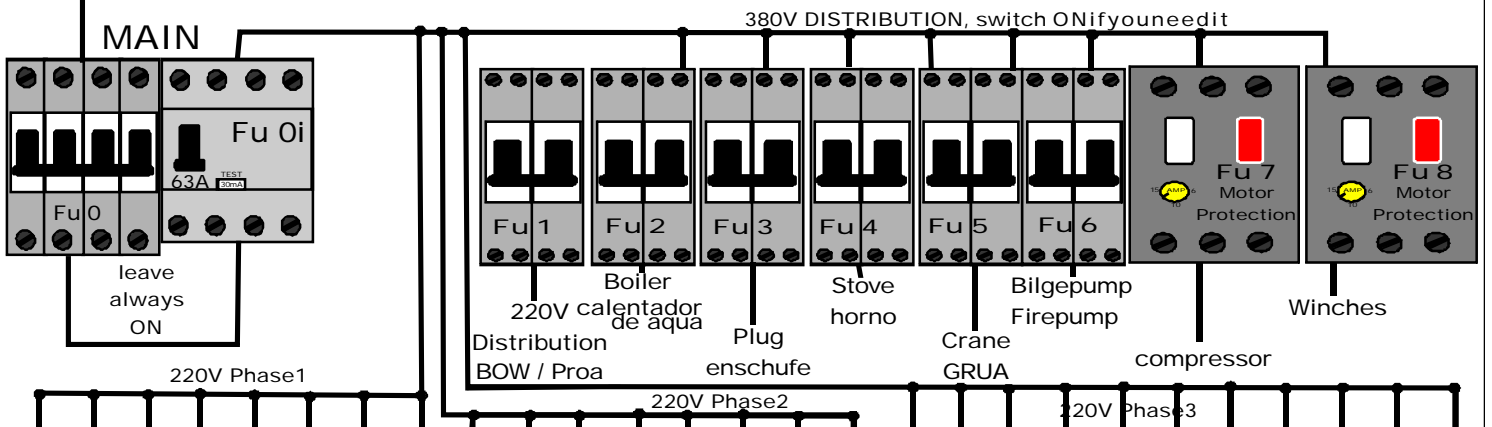

- F 1 Charger 1
- F 2 Charger 2
- F 3 Luz sala maquina
- F 4 Plug engine room s/b
- F 5 Enshure sala maquina
- F 6 Plugs kitchen/salon
- F 7 Enshure cocina
- F 8 Plugs owner bath
- F 9 Enshure propetario
- F 10 Plugs bridge charttable
- F 11 Enshure puente mapa
- F 12 Plugs kitchen/salon
- F 13 Enshure cocina
- F 14 Plugs bow cabin proa
- F 15 Enshure cabina proa
- F 16 Plugs bridge
- F 17 Enshure puente
- F 18 Plugs bridge charttable
- F 19 Enshure puente mapa
- F 20 Plugs owner bath
- F 21 Enshure propetario
- F 22 Plugs kitchen/salon
- F 23 Enshure cocina
- F 24 Plugs bow cabin proa
- F 25 Enshure cabina proa
- F 26 Plugs bridge
- F 27 Enshure puente

object		MAVANA 380V Distribution	
drawing		principal	
for			
sheet 0	06.06.2006		